 



BuffetBoost™ Charging Tray Instruction Manual



PARTS INCLUDED



 
BuffetBoost
Charging Tray



Power Cable



 
5 Caps

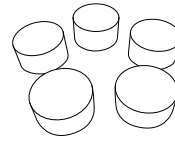

5 Feet



 5 Risers

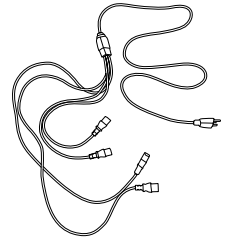

1 to 4 Outlet Power Cord
(Sold Separately)

ASSEMBLING YOUR BUFFETBOOST CHARGING TRAY FOR SINGLE TIER USE

1. Insert the Caps into the Tray

- Insert the 5 caps into the five round openings on the top of the tray.

2. Attach the Feet to the Risers

- Insert one end of each riser into the opening of a foot.
- Push firmly until the riser is fully seated.

3. Attach the Risers to the Tray

 
 
- Insert the five risers into the corresponding round openings on the underside of the tray.
- Ensure each riser is fully seated to elevate the tray for proper airflow during use.

4. Connect the Power Cord

- Plug the power cord into the port located on the back of the tray.
- Connect the other end to a nearby power outlet.

Important Note:

- Proper Airflow: The tray must be elevated using the provided risers to ensure proper airflow. Operating the tray without the risers may lead to overheating or reduced performance.

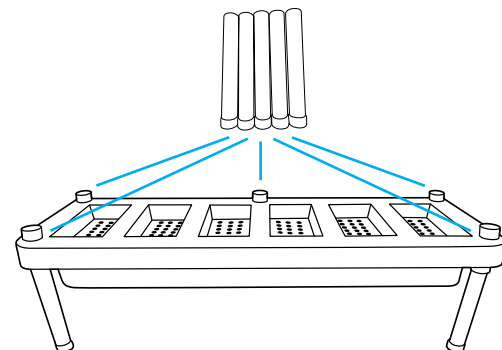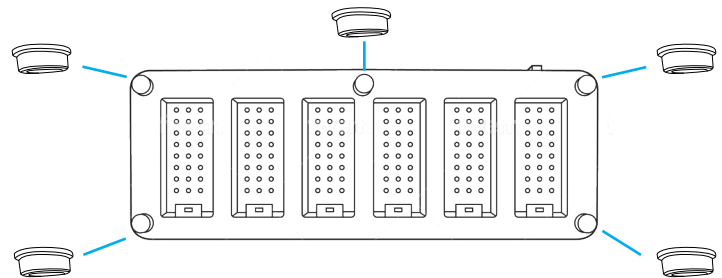

ASSEMBLING YOUR BUFFETBOOST CHARGING TRAY FOR MULTI-TIER USE

1. Attach the Feet to the Bottom 5 Risers

- Insert one end of each riser into the opening of a foot.
- Push firmly until the riser is fully seated.

2. Attach the Risers to the Bottom Tray

- Insert one end of each riser into the opening of a foot.
- Push firmly until the riser is fully seated.

3. Adding Additional Tiers

- Add Risers to the Next Tray: Align the next five risers, without feet attached, with the round openings on the underside of the next tray (sold-separately). Insert the risers and push firmly until fully seated.
- Assemble the Tier: Align the risers of the new tray with the openings on the lower tray. Push the risers into the openings until fully seated.
- Repeat for Additional Tiers: Follow the above steps to add more tiers as needed.
- Caution: Do not exceed 4 tiers when using a 20-amp outlet or 3 tiers with a 15-amp outlet.
- Insert Caps into the Top Tray: Insert the 5 caps into the five round openings on the top of the uppermost tray.

4. Connect Power Cords

Option 1: Standard Connection


- Use the individual power cords provided with each tray.
- Insert a power cord into the port on the back of each tray.
- Plug each cord into a nearby outlet.
- Caution: If plugging four cords into a single outlet, ensure the outlet is rated for 20 amps.

Option 2: 1-4 Outlet Power Cord Connection (Optional)

- Using item BBC41 (sold separately), connect the four branch leads of the cord to the power ports on the back of up to four trays.
- Plug the single main end of BBC41 into a nearby outlet.
- Caution: For a 4-tier rack, the outlet must be rated for 20 amps.

Important Note:

 - Proper Airflow: The lowest tray of the multi-tier charging rack must be elevated using the provided risers to ensure proper airflow. Operating the tray without the risers may lead to overheating or reduced performance.

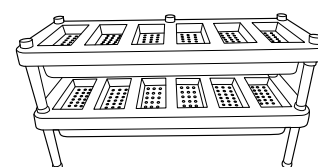

USING YOUR BUFFETBOOST CHARGING TRAY TO CHARGE YOUR BUFFETBOOST PORTABLE BATTERY

1. Power On the Charging Tray:

- Locate the red power switch on the back of the charging tray.
- Flip the switch to the "On" position.

2. Insert Batteries:

- Align the yellow connectors on each battery with the charging bay slots.
- Push each battery firmly into the bay until it is fully seated.

3. Confirm Charging:

 
 
- Verify that the LED battery level indicators light up on each battery.
- Flashing blue LED lights on the tray indicate the battery is charging and display its current charge level.

4. Monitor Charge Status:


- The battery is fully charged when all 4 blue LED lights are solid blue.
- Batteries will charge fully in under four hours.
- Once charging is complete, turn off the red power switch located on the back of the charging tray.

Important Notes:

- **Hot Batteries:** If a hot battery is placed in a charging bay, no LED lights will activate. Wait for the battery to cool before attempting to charge it.
- **Do Not Overcharge:** Remove batteries promptly once fully charged to maintain optimal performance and lifespan.

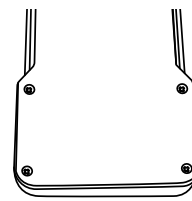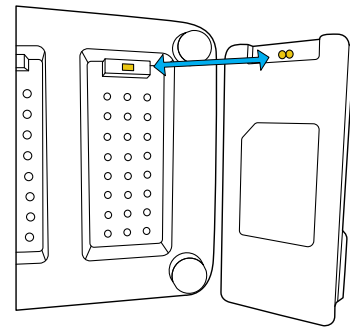

Fully Charged

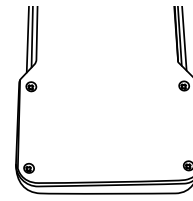 

Charging

CLEANING RECOMMENDATIONS

- Turn off the charging tray and allow it to cool completely.
- The charging tray should be cleaned lightly with a damp cloth with light diluted detergent as needed.
- **Warning!** Do not wash the charging tray in a dishwasher or submerge in water or other liquid.
- Do not use hard scouring pads to clean, as they may cause scratches.

MAINTENANCE SPECIFICATIONS

- Use in temperatures between 40°-140° F
- Store in a cool, dry location: best between 40-80° F
- If the charging tray fails to power on, ensure that all cords and connectors located on the underside of the tray are securely plugged in.

IMPORTANT SAFEGUARDS

- Do not exceed 4 tiers when using a 20-amp outlet or 3 tiers with a 15-amp outlet.
- Do not use charging tray if it malfunctions or has been damaged in any matter.
- Do not use the charging tray with a damaged cord or plug.
- Unplug charging tray when not in use.
- Avoid placing the charging tray near heat sources, flammable materials, or direct sunlight.

CERTIFICATES



WARRANTY

Thank you for choosing the BuffetBoost charging tray. We are confident in the quality and durability of our product and are pleased to offer a one-year limited warranty.

Submitting a Claim: To submit a warranty claim, please contact our customer service team at 1-800-333-9133 or email us at info@amnow.com. To expedite your claim, please have your proof of purchase ready.

Proof of Purchase: Customers will need to provide proof of purchase to take advantage of the warranty. Please retain your original receipt or invoice as proof of purchase.

FCC REGULATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.